

How to install StockGuard 3-Way Tensioner (T Buckle):

To add a 3-way tensioner (F36T) to a tensioner (F36V) follow these steps:


Step 1
Take your T-Buckle



Step 2
With your tensioner



Step 3
Put them together before attaching to your post

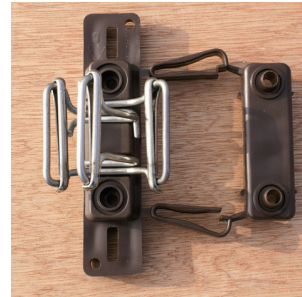

Step 4
Secure your tape, you now have a 3-way tensioner to separate a paddock in two sections

