


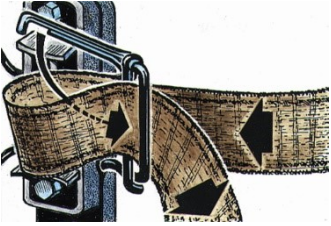





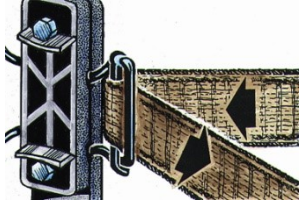


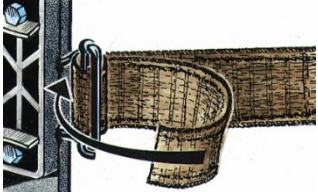

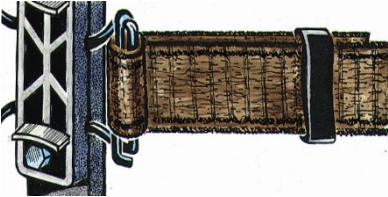


## How to install StockGuard Tape

Start installing all the insulators and tensioners on the posts. Attach the tape to the buckle of the first tensioner then follow these 14 easy steps:
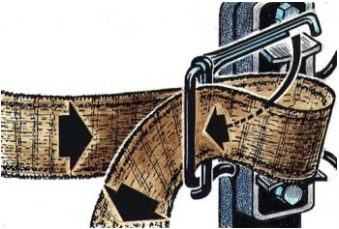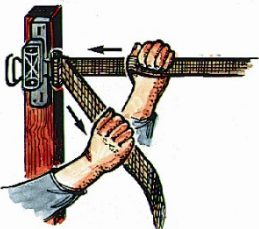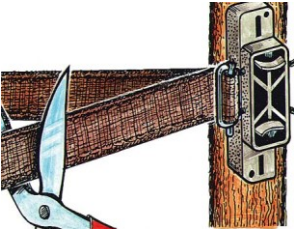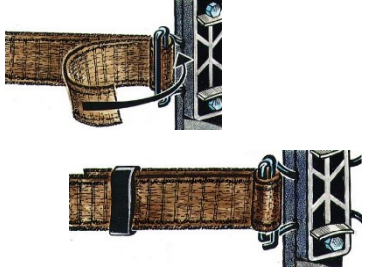
<p><b>Step 1</b> Make a loop with the tape. Push it through the buckle. Insert the tang in the loop.</p>	<p><b>Step 2</b> Pull the end of the tape.</p>	<p><b>Step 3</b> To lock in place, go back through the stainless-steel buckle.</p>
		
<p><b>Step 4</b> Secure the tail with the clip. If possible, fold back the end of the tape on the inside to prevent fraying.</p>	<p><b>Step 5</b> Unroll the tape to the next tensioner.</p>	<p><b>Step 6</b> Pull the whole tape by hand.</p>
		
<p><b>Step 7</b> Set the tape in the tensioner buckle.</p>	<p><b>Step 8</b> Pull and set the final tension from one tensioner to the next.</p>	<p><b>Step 9</b> Cut the tape 20cm from the buckle.</p>
		

<p><b>Step 10</b> Secure the tail with the clip.</p>	<p><b>Step 11</b> Secure your insulators to your posts. (Recommend using two screws only, set on opposite corners).</p>	<p><b>Step 12</b> Position the tape on the insulator.</p>
		
<p><b>Step 13</b> Close the cap and screw in the bottom peg.</p>	<p><b>Step 14</b> Then screw in the other peg but do not overtighten.</p>	<p><b>Alternate insulators</b> Example of F16V on high pressure polypipe.</p>
		
<p><b>To loosen the tape:</b> Take the tail of the tape out of the buckle.</p>	<p>Slacken the fence tape by pushing it with the palm of your hand. It will then loosen by itself.</p>	
