


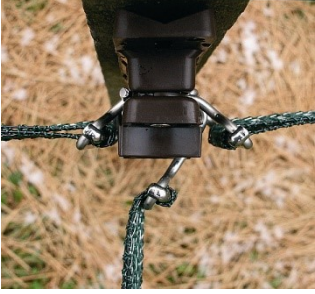



How to install StockGuard 3-Way Tensioner (T Buckle):

To add a 3-way tensioner (F36T) to a tensioner (F36V) follow these steps:

| | | |
|---|--|---|
|  |  |  |
| <p>Step 1 Take your T-Buckle</p> | <p>Step 2 With your Tensioner</p> | <p>Step 3 Put them together before attaching to your post</p> |
|  |  | |
| <p>Step 4 Secure your tape, you now have a 3-way tensioner to separate a paddock in two sections</p> | | |